


Silver Cross®

THE BEST START IN LIFE

Musical Mobile

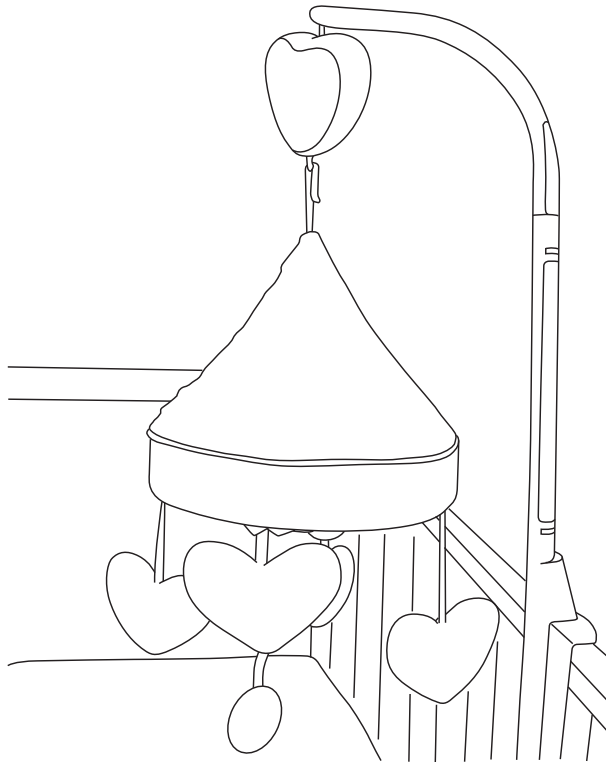

**IMPORTANT: KEEP THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

These instructions are important

Read these instructions before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions. Remember, the safety of your child is your responsibility.

If somebody unfamiliar is using the musical mobile, always ensure that they read these instructions carefully so that they understand how the product works.

Contents


Please check all your parts have been supplied. Your musical cot mobile includes:

- Upper curved arm
- Lower arm
- Base mount
- Screw
- Lock washer
- Nut
- Fabric covered music box
- Fabric carousel

Assembly Instructions

- 1.1 Insert the upper curved arm and lower arm into the base mount.
- 1.2 Insert screw into the base mount and tighten by turning clockwise.
- 1.3 Position the arm on the rail of the cot so that the ledge rests on the rail and the screw fits in between two of the bars. We recommend placing the mobile at the baby's feet for better visual stimulation and safety.
- 1.4 Secure the arm by tightening the lock washer and nut by turning clockwise.
- 1.5 Attach the music box onto the hook located on the upper curved arm. The music box is designed to fit snugly.
- 1.6 Attach the carousel to the music box by inserting the hook through the fabric loop. The carousel will now hang suspended from the music box.

Wind the music box clockwise whilst holding the box in one hand and winding with the other. Do not wind more than four complete revolutions at any one time.

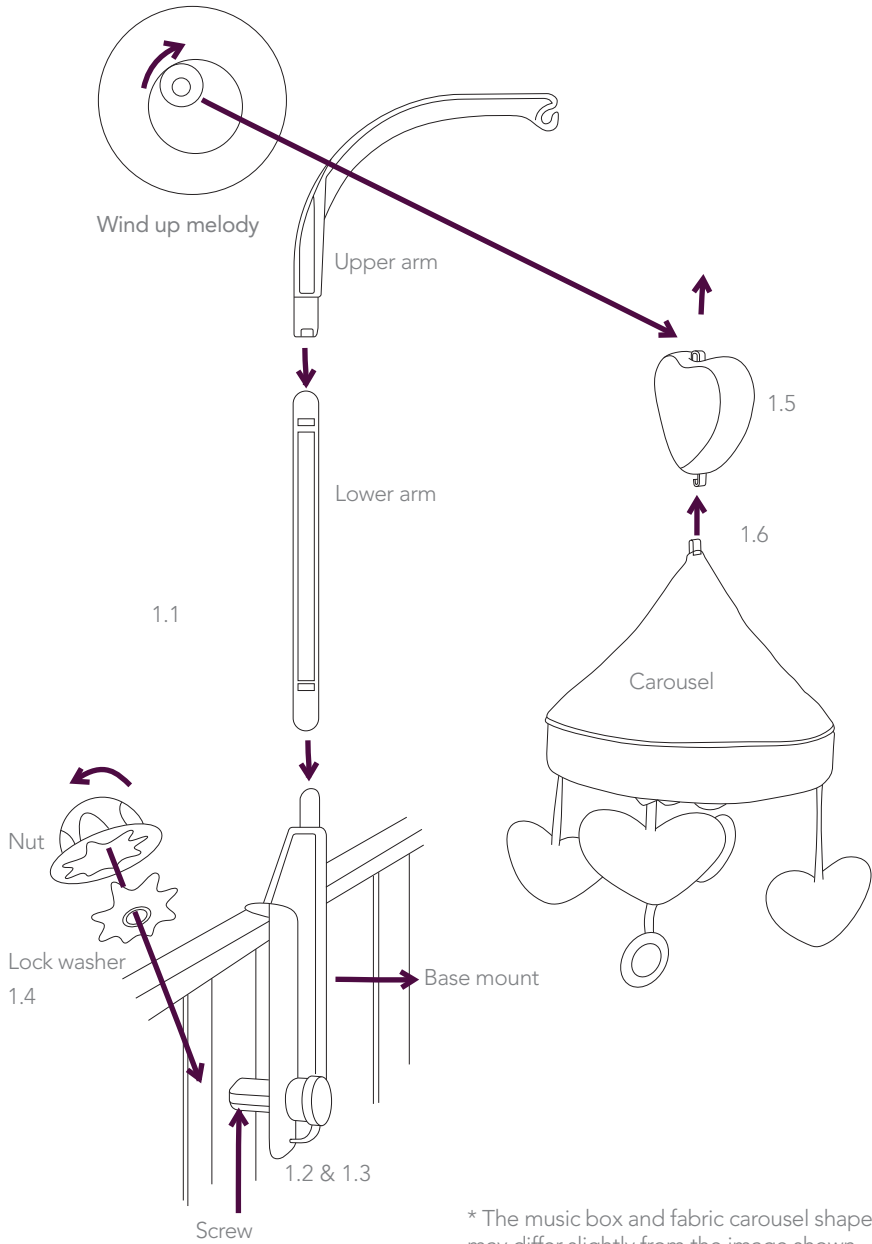

* The music box and fabric carousel shape may differ slightly from the image shown depending on which model purchased.

Safety Notes

Your musical mobile is a high quality Silver Cross product. It complies with the relevant safety standards and with correct use and maintenance should give good service. If you have any problems with your musical mobile please contact your Silver Cross retailer or Silver Cross customer services who will take the appropriate action.

Suitable from birth to approximately five months.

Only mount on cot rail. Do not mount on a travel cot or playpen.

This mobile may not fit all cots. Ensure the mobile arm is securely fastened to the cot rail.

WARNING! To prevent possible injury from entanglement, remove this product when the child starts trying to get up on its hands and knees in a crawling position.

WARNING! Only wind the music box clockwise whilst holding the box in one hand and winding with the other. Do not wind more than 4 complete revolutions at any one time. Do not over wind the music box.

WARNING! Adult assembly required.

WARNING! This product is not a toy.

WARNING! The musical mobile is intended for visual stimulation only. The mobile is not intended to be held or played with by the baby.

WARNING! The mobile should be kept out of baby's reach.

Care and Maintenance

Regularly check your musical mobile for signs of wear. To clean the arm: use a damp cloth. To clean the carousel: Sponge clean only. Do not submerge in water/ machine wash or use abrasive cleaning agents. Allow both parts to dry naturally away from direct heat. For more information see the washcare label on the product.

Guarantee

All Silver Cross products are guaranteed for a period of 12 months against faulty workmanship, when the product is used correctly according to the instruction manual.

Please read these instructions carefully before using your new Musical Cot Mobile and keep for future reference.

www.silvercrossbaby.co.uk